

DELUXE 16" PIZZA OVEN

INSTRUCTIONS

Baking Instructions

Keep your food frozen until ready to bake. The surface area is approximately 17" square so the Oven is large enough to accommodate many types of frozen food including 16" pizza. Place food onto the baking rack and slide the rack into oven. Set the OVEN TEMP dial to the desired temperature and set the timer dial to the desired bake time. Note: You must turn the TIMER past the 2 minute mark in order to activate oven.

During busy times, there is a HOLD option that enables you to use the oven without setting the 30 minute timer.

Always check food midway through the baking cycle, rotating if necessary to ensure even baking.

Cleaning

- Remove plug from wall socket and allow cooling before cleaning.
- To clean outside of oven, wipe with damp cloth and dry thoroughly.
- To clean the crumb tray, remove and rinse with warm soapy water, wipe with Damp cloth and dry thoroughly before placing back into oven.

Safety

- Do not attempt to bake greasy foods in oven.
- Use only with properly grounded outlet.
- Do not leave unattended while in use
- Do not use crumb tray as baking surface.
- Do not clean while hot.
- Do not clean metal finish with scouring pad or harsh abrasives.
- Do not place paper, cardboard, plastic or similar materials in or on the oven.
- Never operate without the crumb tray.
- Do not touch surface of the oven during or immediately after baking. Protective Hot pads or gloves are recommended when baking.