

Sno Cone Machine Instructions

IMPORTANT INFORMATION:

Dimensions: 16" w X 25" l X 31" h

Electrical: Do not run on long extension cord, machine may burn up. CAUTION: Machine must be properly grounded to prevent shock in case of electrical problems.

It is normal for the motor to get warm during use.

Transporting: Heavy! Fits in back seat/ trunk of most cars.

Misc: ½ # of ice per cone approximately, 1 gallon of syrup makes about 100 cones.

TO OPERATE MACHINE:

1. Start the motor and fill the gooseneck with ice cubes or block ice broken into pieces 3" to 4" in size. Fill to about an inch or so from the top, the larger the piece of ice the better the snow.
2. Push the pusher handle down to press the ice against the cutter head. A firm even pressure is all that is required, but sometimes you will find it better to relieve the pressure several times on the way down. This lets the ice rearrange itself and you get a better bite.
3. DO NOT FORCE THE HANDLE too much as the motor could be stalled. 4. When too much pressure is necessary, relieve the handle, and then come down again.

CAUTION: DO NOT LET ANY METAL GET DOWN IN THE GOOSENECK, OR YOU WILL RUIN THE BLADES.

Never put your fingers or any object into the shaver body while motor is running. Disregard for these instructions and careless handling will result in accidents or injury. If problems not covered occur, contact your professional party rental center immediately.

CLEANING: Always unplug the machine before cleaning. Wipe all surfaces clean before returning to the rental center to AVOID ADDITIONAL CLEANING CHARGES.